

MOBILE SPEAKER SYSTEM USER MANUAL

MODEL 150125

Thank you for purchasing this MANHATTAN® Mobile Speaker System, Model 150125.

Delivering full-range sound from iPods, iPhones, MP3 and portable CD/DVD players, notebook computers, hand-held games and other mobile media devices, its special connector directly fits iPods and iPhones without cables, adapters or docks. Plus, a unique, retractable resonator easily extends to further deepen and expand bass response and improve audio performance.

**See the back of this sheet for
Instructions & Specifications.**

- Dual function – rich, full-range sound from compact speaker with backup power supply
- Connects to iPod, iPhone, notebook computers, MP3 and portable CD/DVD players, hand-held games and more
- Retractable resonator deepens and expands bass response
- Ideal alternative to headphones to enjoy and easily share music and other audio
- Easily connects to iPod and iPhone without cables, adapters or docks
- Built-in rechargeable battery provides hours of use
- Windows and Mac compatible – no drivers or power supply required
- Lifetime Warranty




MANHATTAN[™]
BRINGING COMPUTERS TO LIFE

MANHATTAN® offers a complete line of PC Components, Peripherals, Cables and Accessories. Ask your local computer dealer for more information or visit us online at

www.manhattan-products.com

Copyright © MANHATTAN

All products mentioned are trademarks or registered trademarks of their respective owners.

INSTRUCTIONS



BACK VIEW




FRONT VIEW



SIDE VIEW

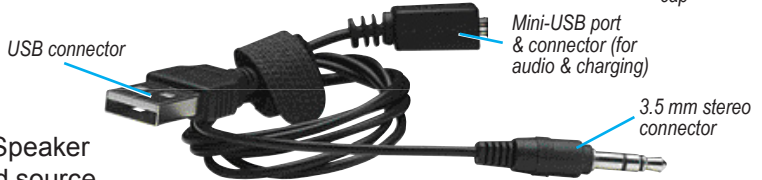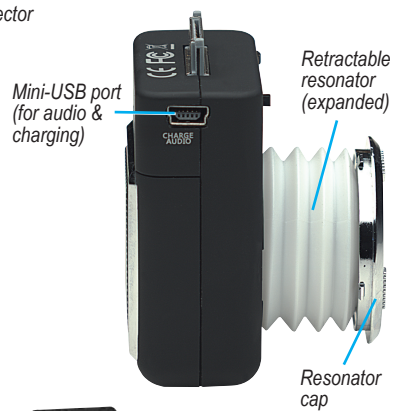

1. Connect the Mobile Speaker System to your sound source using the included cable or connector.
2. Set the Power switch on the back of the Speaker to On (the center position). The Power LED on the front of the Speaker lights to indicate Play mode; and turns off to indicate no sound (Mute) or charging.
3. To use the Mobile Speaker System as an emergency power source for an iPod or iPhone, connect the devices and set the Power switch to Charge.
4. To use the resonator, press its cap and rotate it counterclockwise so you can expand the diaphragm. After use, compress the diaphragm and turn the cap clockwise to lock the resonator in place.

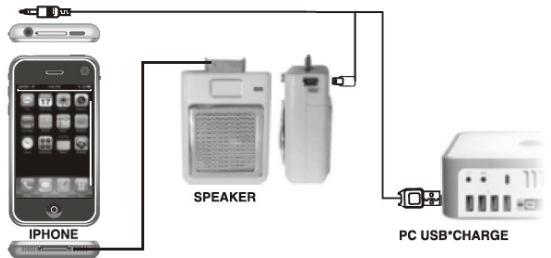

SPECIFICATIONS

GENERAL

- Frequency response (amp): 280 Hz – 16 kHz
- Frequency response (speaker): 330 Hz – 18 kHz
- Signal to noise ratio (S/N): ≥ 80 dB
- Total harmonic distortion (THD): $\leq 1\%$
- Power output: 1.7 W
- Diameter, driver: 3.6 cm (1.4 in.)

CONNECTIONS

- iPhone/iPod connector
- USB mini B-type (audio/charging)

CABLE

- 3.5 mm stereo / USB type-A male to USB mini B male
- Length: 75 cm (29.5 in.)

POWER

- Battery: lithium, 300 mAh
- Working time: 6 hours

- Full recharge time: 5 hours
- Volume control, LED indicator and on/off/charge switch

PHYSICAL

- Dimensions: 60 x 46 x 27 mm (2.3 x 1.8 x 1 in.)
- Weight: 50 g (1.76 oz.)

PACKAGE CONTENTS

- Mobile Speaker System
- Travel bag, cable, user manual